

GigaPan Camera Compatibility Chart

From 07.07.2015

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
CANON	Canon Digital Elph SD1200	X			Button Pusher
CANON	Canon Digital Elph SD780	X			Button Pusher
CANON	Canon Digital IXUS 100 IS	X			Button Pusher
CANON	Canon Digital IXUS 110 IS	X			Button Pusher
CANON	Canon Digital IXUS 70	X			Button Pusher
CANON	Canon Digital IXUS 700	X			Button Pusher
CANON	Canon Digital IXUS 75	X			Button Pusher
CANON	Canon Digital IXUS 80	X			Button Pusher
CANON	Canon Digital IXUS 800 IS	X			Button Pusher
CANON	Canon Digital IXUS 85 IS	X			Button Pusher
CANON	Canon Digital IXUS 850 IS	X			Button Pusher
CANON	Canon Digital IXUS 860 IS	X			Button Pusher
CANON	Canon Digital IXUS 870 IS	X			Button Pusher
CANON	Canon Digital IXUS 90 IS	X			Button Pusher
CANON	Canon Digital IXUS 900 Ti	X			Button Pusher
CANON	Canon Digital IXUS 940 IS	X			Button Pusher
CANON	Canon Digital IXUS 950 IS	X			Button Pusher
CANON	Canon Digital IXUS 960 IS	X			Button Pusher
CANON	Canon Digital IXUS 970 IS	X			Button Pusher
CANON	Canon Digital IXUS 980	X			Button Pusher
CANON	Canon Digital IXUS 990	X			Button Pusher
CANON	Canon EOS 10D			X	Canon N3
CANON	Canon EOS 1D			X	Canon N3
CANON	Canon EOS 1D Mark II			X	Canon N3
CANON	Canon EOS 1D Mark II N			X	Canon N3
CANON	Canon EOS 1D Mark III			X	Canon N3
CANON	Canon EOS 1D Mark IV			X	Canon N3
CANON	Canon EOS 1Ds			X	Canon N3
CANON	Canon EOS 1Ds Mark II			X	Canon N3
CANON	Canon EOS 1Ds Mark III			X	Canon N3
CANON	Canon EOS 1DX			X	Canon N3
CANON	Canon EOS 20D			X	Canon N3
CANON	Canon EOS 20Da			X	Canon N3
CANON	Canon EOS 30D			X	Canon N3
CANON	Canon EOS 40D			X	Canon N3
CANON	Canon EOS 50D			X	Canon N3
CANON	Canon EOS 5D			X	Canon N3
CANON	Canon EOS 5D Mark II			X	Canon N3
CANON	Canon EOS 5D Mark III			X	Canon N3
CANON	Canon EOS 60D			X	Canon N3
CANON	Canon EOS 60Da			X	Canon N3
CANON	Canon EOS 6D			X	Canon N3
CANON	Canon EOS 7D			X	Canon N3
CANON	Canon EOS 7DSV			X	Canon N3

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
CANON	Canon EOS M		X		Button Pusher
CANON	Canon IXUS 300 HS	X			Button Pusher
CANON	Canon Powershot A1000 IS	X			Button Pusher
CANON	Canon Powershot A1100 IS	X			Button Pusher
CANON	Canon Powershot A1200	X			Button Pusher
CANON	Canon Powershot A1300	X			Button Pusher
CANON	Canon Powershot A2000	X			Button Pusher
CANON	Canon Powershot A2100	X			Button Pusher
CANON	Canon Powershot A2200	X			Button Pusher
CANON	Canon Powershot A2300	X			Button Pusher
CANON	Canon Powershot A2400 IS	X			Button Pusher
CANON	Canon Powershot A3300 IS	X			Button Pusher
CANON	Canon Powershot A3400 IS	X			Button Pusher
CANON	Canon Powershot A4000 IS	X			Button Pusher
CANON	Canon Powershot A480	X			Button Pusher
CANON	Canon Powershot A490	X			Button Pusher
CANON	Canon Powershot A495	X			Button Pusher
CANON	Canon Powershot A510	X			Button Pusher
CANON	Canon Powershot A520	X			Button Pusher
CANON	Canon Powershot A550	X			Button Pusher
CANON	Canon Powershot A560	X			Button Pusher
CANON	Canon Powershot A570 IS	X			Button Pusher
CANON	Canon Powershot A580	X			Button Pusher
CANON	Canon Powershot A590 IS	X			Button Pusher
CANON	Canon Powershot A620		X		Button Pusher
CANON	Canon Powershot A630		X		Button Pusher
CANON	Canon Powershot A640		X		Button Pusher
CANON	Canon Powershot A650		X		Button Pusher
CANON	Canon Powershot A700	X			Button Pusher
CANON	Canon Powershot A710 IS	X			Button Pusher
CANON	Canon Powershot A720 IS	X			Button Pusher
CANON	Canon Powershot A800	X			Button Pusher
CANON	Canon Powershot A810	X			Button Pusher
CANON	Canon Powershot A95	X			Button Pusher
CANON	Canon Powershot D10		X		Button Pusher
CANON	Canon Powershot D20		X		Button Pusher
CANON	Canon Powershot ELPH 110 HS	X			Button Pusher
CANON	Canon Powershot ELPH 1100 HS	X			Button Pusher
CANON	Canon Powershot ELPH 300 HS	X			Button Pusher
CANON	Canon Powershot ELPH 310 HS	X			Button Pusher
CANON	Canon Powershot ELPH 320 HS	X			Button Pusher
CANON	Canon Powershot ELPH 500 HS	X			Button Pusher
CANON	Canon Powershot ELPH 510 HS	X			Button Pusher
CANON	Canon Powershot ELPH 520 HS	X			Button Pusher
CANON	Canon Powershot ELPH 530 HS	X			Button Pusher
CANON	Canon Powershot G1	X			Button Pusher

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
CANON	Canon Powershot G1 X	X	X		Button Pusher
CANON	Canon Powershot G10	X	X		Button Pusher
CANON	Canon Powershot G11	X	X		Button Pusher
CANON	Canon Powershot G12	X	X		Button Pusher
CANON	Canon Powershot G15	X	X		Button Pusher
CANON	Canon Powershot G2	X			Button Pusher
CANON	Canon Powershot G3	X			Button Pusher
CANON	Canon Powershot G5	X			Button Pusher
CANON	Canon Powershot G6	X			Button Pusher
CANON	Canon Powershot G7	X			Button Pusher
CANON	Canon Powershot G9	X			Button Pusher
CANON	Canon Powershot Pro1		X		Button Pusher
CANON	Canon Powershot S1 IS		X		Button Pusher
CANON	Canon Powershot S100	X			Button Pusher
CANON	Canon Powershot S110	X			Button Pusher
CANON	Canon Powershot S2 IS		X		Button Pusher
CANON	Canon Powershot S3 IS		X		Button Pusher
CANON	Canon Powershot S5		X		Button Pusher
CANON	Canon Powershot S70	X			Button Pusher
CANON	Canon Powershot S80	X			Button Pusher
CANON	Canon Powershot S90	X			Button Pusher
CANON	Canon Powershot S95	X			Button Pusher
CANON	Canon Powershot SD1000	X			Button Pusher
CANON	Canon Powershot SD1100	X			Button Pusher
CANON	Canon Powershot SD1200	X			Button Pusher
CANON	Canon Powershot SD500	X			Button Pusher
CANON	Canon Powershot SD700 IS	X			Button Pusher
CANON	Canon Powershot SD750	X			Button Pusher
CANON	Canon Powershot SD770 IS	X			Button Pusher
CANON	Canon Powershot SD780 IS	X			Button Pusher
CANON	Canon Powershot SD790 IS	X			Button Pusher
CANON	Canon Powershot SD800	X			Button Pusher
CANON	Canon Powershot SD850	X			Button Pusher
CANON	Canon Powershot SD850	X			Button Pusher
CANON	Canon Powershot SD870	X			Button Pusher
CANON	Canon Powershot SD880	X			Button Pusher
CANON	Canon Powershot SD890	X			Button Pusher
CANON	Canon Powershot SD900	X			Button Pusher
CANON	Canon Powershot SD940 IS	X			Button Pusher
CANON	Canon Powershot SD950 IS	X			Button Pusher
CANON	Canon Powershot SD960 IS	X			Button Pusher
CANON	Canon Powershot SD970	X			Button Pusher
CANON	Canon Powershot SD990 IS	X			Button Pusher
CANON	Canon Powershot SX 10 IS		X		Button Pusher
CANON	Canon Powershot SX1 IS		X		Button Pusher
CANON	Canon Powershot SX100 IS	X			Button Pusher

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
CANON	Canon Powershot SX110 IS	X			Button Pusher
CANON	Canon Powershot SX120 IS	X			Button Pusher
CANON	Canon Powershot SX130 IS	X			Button Pusher
CANON	Canon Powershot SX150 IS	X			Button Pusher
CANON	Canon Powershot SX160 IS	X			Button Pusher
CANON	Canon Powershot SX20 IS		X		Button Pusher
CANON	Canon Powershot SX200 IS	X			Button Pusher
CANON	Canon Powershot SX210 IS	X			Button Pusher
CANON	Canon Powershot SX230 HS	X			Button Pusher
CANON	Canon Powershot SX260 HS	X			Button Pusher
CANON	Canon Powershot SX30 IS		X		Button Pusher
CANON	Canon Powershot SX40 HS		X		Button Pusher
CANON	Canon Powershot SX50 HS		X		Button Pusher
CANON	Canon Powershot SX500 IS		X		Button Pusher
CANON	Canon Rebel EOS 300D			X	Canon E3
CANON	Canon Rebel EOS 350D			X	Button Pusher
CANON	Canon Rebel T1i EOS 500D			X	Canon E3
CANON	Canon Rebel T2i EOS 550D			X	Canon E3
CANON	Canon Rebel T3 EOS 1100D			X	Canon E3
CANON	Canon Rebel T3i EOS 600D			X	Canon E3
CANON	Canon Rebel T4i EOS 650D			X	Canon E3
CANON	Canon Rebel XS EOS 1000D			X	Canon E3
CANON	Canon Rebel Xsi EOS 450D			X	Canon E3
CANON	Canon Rebel Xt EOS 350D			X	Canon E3
CANON	Canon Rebel Xti EOS 400D			X	Canon E3
CASIO	Casio Exilim EX-FH20		X		Button Pusher
CASIO	Casio Exilim EX-P505	X			Button Pusher
CASIO	Casio Exilim EX-P600	X			Button Pusher
CASIO	Casio Exilim EX-P700	X			Button Pusher
CASIO	Casio Exilim EX-Z700	X			Button Pusher
CASIO	Casio Exilim EX-Z750	X			Button Pusher
CASIO	Casio Exilim Pro EX-F1		X		Button Pusher
CONTAX	Contax 645			X	Manual
FUJI	Fuji Film FinePix E500	X			Button Pusher
FUJI	Fuji Film FinePix E510	X			Button Pusher
FUJI	Fuji Film FinePix E550	X			Button Pusher
FUJI	Fuji Film FinePix E900	X			Button Pusher
FUJI	Fuji Film FinePix F660EXR	X			Button Pusher
FUJI	Fuji Film FinePix F750EXR	X			Button Pusher
FUJI	Fuji Film FinePix F800EXR	X			Button Pusher
FUJI	Fuji Film FinePix F810	X			Button Pusher
FUJI	Fuji Film FinePix HS25EXP		X		Button Pusher
FUJI	Fuji Film FinePix HS30EXR		X		Button Pusher
FUJI	Fuji Film FinePix JX500	X			Button Pusher
FUJI	Fuji Film FinePix JX580	X			Button Pusher
FUJI	Fuji Film FinePix JZ100	X			Button Pusher

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
FUJI	Fuji Film FinePix JZ250	X			Button Pusher
FUJI	Fuji Film FinePix S2000HD	X			Button Pusher
FUJI	Fuji Film FinePix S3			X	Nikon 10 pin
FUJI	Fuji Film FinePix S4200		X		Button Pusher
FUJI	Fuji Film FinePix S4500		X		Button Pusher
FUJI	Fuji Film FinePix S5 PRO			X	Nikon 10 pin
FUJI	Fuji Film FinePix S5100		X		Button Pusher
FUJI	Fuji Film FinePix S5200		X		Button Pusher
FUJI	Fuji Film FinePix S5500		X		Button Pusher
FUJI	Fuji Film FinePix S5600		X		Button Pusher
FUJI	Fuji Film FinePix S5700		X		Button Pusher
FUJI	Fuji Film FinePix S6000fd		X		Button Pusher
FUJI	Fuji Film FinePix S6500fd		X		Button Pusher
FUJI	Fuji Film FinePix S7000		X		Button Pusher
FUJI	Fuji Film FinePix S8000fd		X		Button Pusher
FUJI	Fuji Film FinePix S8100fd		X		Button Pusher
FUJI	Fuji Film FinePix S9000		X		Button Pusher
FUJI	Fuji Film FinePix S9500		X		Button Pusher
FUJI	Fuji Film FinePix SL300		X		Button Pusher
FUJI	Fuji Film FinePix SX1		X		Button Pusher
FUJI	Fuji Film FinePix T350	X			Button Pusher
FUJI	Fuji Film FinePix T400	X			Button Pusher
FUJI	Fuji Film FinePix X10		X		Button Pusher
FUJI	Fuji Film FinePix XF1	X			Button Pusher
FUJI	Fuji Film FinePix XP100	X			Button Pusher
FUJI	Fuji Film FinePix XP170	X			Button Pusher
FUJI	Fuji Film FinePix XP50	X			Button Pusher
FUJI	Fuji Film X Pro 1		X		Button Pusher
FUJI	Fuji Film XE1		X		Button Pusher
GE	GE C1440W	X			Button Pusher
GE	GE E1410SW	X			Button Pusher
GE	GE G100	X			Button Pusher
GE	GE J1458W	X			Button Pusher
GE	GE X500		X		Button Pusher
HASSELBLAD	Hasselblad H3DII-31			X	Canon E3
HASSELBLAD	Hasselblad H3DII-39			X	Canon E3
HASSELBLAD	Hasselblad H3DII-39MS			X	Canon E3
HASSELBLAD	Hasselblad H3DII-50			X	Canon E3
HASSELBLAD	Hasselblad H3DII-50MS			X	Canon E3
HASSELBLAD	Hasselblad H4D-31			X	Canon E3
HASSELBLAD	Hasselblad H4D-40			X	Canon E3
HASSELBLAD	Hasselblad H4D-50			X	Canon E3
HASSELBLAD	Hasselblad H4D-50MS			X	Canon E3
HASSELBLAD	Hasselblad H4D-60			X	Canon E3
KODAK	Kodak Easyshare Z1015 IS		X		Button Pusher
KODAK	Kodak Easyshare Z1275	X			Button Pusher

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
KODAK	Kodak Easyshare Z612		X		Button Pusher
KODAK	Kodak Easyshare Z812 IS		X		Button Pusher
KODAK	Kodak Easyshare Z885		X		Button Pusher
KODAK	Kodak Easyshare Z950		X		Button Pusher
LEICA	Leica D-LUX 1		X		Button Pusher
LEICA	Leica D-LUX 2		X		Button Pusher
LEICA	Leica D-LUX 3	X	X		Button Pusher
LEICA	Leica D-LUX 4	X			Button Pusher
LEICA	Leica D-LUX 6	X			Button Pusher
LEICA	Leica M		X		Button Pusher
LEICA	Leica M Monochrome		X		Button Pusher
LEICA	Leica M8		X		Button Pusher
LEICA	Leica M9		X		Button Pusher
LEICA	Leica M9-P		X		Button Pusher
LEICA	Leica M-E		X		Button Pusher
LEICA	Leica V-LUX 40	X			Button Pusher
LEICA	Leica X2		X		Button Pusher
MAMIYA	Mamiya 645 AFD			X	PhaseOne Cable
MAMIYA	Mamiya 645 AFD II			X	PhaseOne Cable
MAMIYA	Mamiya 645 AFD III			X	PhaseOne Cable
MINOLTA	Minolta Dimage A1		X		Button Pusher
MINOLTA	Minolta Dimage A2		X		Button Pusher
MINOLTA	Minolta Maxxum 7D			X	Manual
NIKON	Nikon 1 J1	X			Button Pusher
NIKON	Nikon 1 J2	X			Button Pusher
NIKON	Nikon 1 V1	X			Button Pusher
NIKON	Nikon 1 V2		X		Button Pusher
NIKON	Nikon CoolPix 4300		X		Button Pusher
NIKON	Nikon CoolPix 4500		X		Button Pusher
NIKON	Nikon CoolPix 5000		X		Button Pusher
NIKON	Nikon CoolPix 5400		X		Button Pusher
NIKON	Nikon CoolPix 5700		X		Button Pusher
NIKON	Nikon CoolPix 8400		X		Button Pusher
NIKON	Nikon CoolPix 8700		X		Button Pusher
NIKON	Nikon CoolPix 8800		X		Button Pusher
NIKON	Nikon CoolPix AW100	X			Button Pusher
NIKON	Nikon CoolPix L25	X			Button Pusher
NIKON	Nikon CoolPix L26	X			Button Pusher
NIKON	Nikon CoolPix L310		X		Button Pusher
NIKON	Nikon CoolPix L610	X			Button Pusher
NIKON	Nikon CoolPix L810		X		Button Pusher
NIKON	Nikon CoolPix P100		X		Button Pusher
NIKON	Nikon CoolPix P310	X			Button Pusher
NIKON	Nikon CoolPix P510		X		Button Pusher
NIKON	Nikon CoolPix P6000	X			Button Pusher
NIKON	Nikon CoolPix P7000		X		Button Pusher

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
NIKON	Nikon CoolPix P7100	X			Button Pusher
NIKON	Nikon CoolPix P7700	X			Button Pusher
NIKON	Nikon CoolPix P80		X		Button Pusher
NIKON	Nikon CoolPix P90		X		Button Pusher
NIKON	Nikon CoolPix S01	X			Button Pusher
NIKON	Nikon CoolPix S100	X			Button Pusher
NIKON	Nikon CoolPix S1200pj	X			Button Pusher
NIKON	Nikon CoolPix S30	X			Button Pusher
NIKON	Nikon CoolPix S3200	X			Button Pusher
NIKON	Nikon CoolPix S3300	X			Button Pusher
NIKON	Nikon CoolPix S4200	X			Button Pusher
NIKON	Nikon CoolPix S6200	X			Button Pusher
NIKON	Nikon CoolPix S6300	X			Button Pusher
NIKON	Nikon CoolPix S6400	X			Button Pusher
NIKON	Nikon CoolPix S800c	X			Button Pusher
NIKON	Nikon CoolPix S8200	X			Button Pusher
NIKON	Nikon CoolPix S9050	X			Button Pusher
NIKON	Nikon CoolPix S9200	X			Button Pusher
NIKON	Nikon CoolPix S9300	X			Button Pusher
NIKON	Nikon D1X			X	Nikon 10 pin
NIKON	Nikon D200			X	Nikon 10 pin
NIKON	Nikon D2X			X	Nikon 10 pin
NIKON	Nikon D2Xs			X	Nikon 10 pin
NIKON	Nikon D3			X	Nikon 10 pin
NIKON	Nikon D300			X	Nikon 10 pin
NIKON	Nikon D3000		X		Button Pusher
NIKON	Nikon D300S			X	Nikon 10 pin
NIKON	Nikon D3100			X	MC-DC2
NIKON	Nikon D3200			X	MC-DC2
NIKON	Nikon D3S			X	Nikon 10 pin
NIKON	Nikon D3X			X	Nikon 10 pin
NIKON	Nikon D4			X	Nikon 10 pin
NIKON	Nikon D40		X		Button Pusher
NIKON	Nikon D50		X		Button Pusher
NIKON	Nikon D5000			X	MC-DC2
NIKON	Nikon D5100			X	MC-DC2
NIKON	Nikon D5200			X	MC-DC2
NIKON	Nikon D60			X	MC-DC2
NIKON	Nikon D600			X	MC-DC2
NIKON	Nikon D70			X	Manual
NIKON	Nikon D7000			X	MC-DC2
NIKON	Nikon D7000			X	Nikon 10 pin
NIKON	Nikon D70S			X	MC-DC1
NIKON	Nikon D80			X	MC-DC1
NIKON	Nikon D800			X	Nikon 10 pin
NIKON	Nikon D800e			X	Nikon 10 pin

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
NIKON	Nikon D90			X	MC-DC2
OLYMPUS	Olympus C4000 ZOOM		X		Button Pusher
OLYMPUS	Olympus C5050 ZOOM		X		Button Pusher
OLYMPUS	Olympus C5060 Wide Zoom		X		Button Pusher
OLYMPUS	Olympus C750 UZ		X		Button Pusher
OLYMPUS	Olympus C765 UZ		X		Button Pusher
OLYMPUS	Olympus C770 UZ		X		Button Pusher
OLYMPUS	Olympus E30			X	RM-UC1
OLYMPUS	Olympus E300		X		Button Pusher
OLYMPUS	Olympus E330		X		Button Pusher
OLYMPUS	Olympus E400		X		Button Pusher
OLYMPUS	Olympus E410		X		Button Pusher
OLYMPUS	Olympus E420		X		Button Pusher
OLYMPUS	Olympus E450		X		Button Pusher
OLYMPUS	Olympus E500		X		Button Pusher
OLYMPUS	Olympus E510		X		Button Pusher
OLYMPUS	Olympus E620			X	RM-UC1
OLYMPUS	Olympus E-P1		X		Button Pusher
OLYMPUS	Olympus E-P2		X		Button Pusher
OLYMPUS	Olympus E-PL1		X		Button Pusher
OLYMPUS	Olympus E-PL3	X			Button Pusher
OLYMPUS	Olympus E-PL5	X			Button Pusher
OLYMPUS	Olympus E-PM1	X			Button Pusher
OLYMPUS	Olympus E-PM2	X			Button Pusher
OLYMPUS	Olympus Evolt 520 IS			X	RM-UC1
OLYMPUS	Olympus OM-D E-M5			X	RM-UC1
OLYMPUS	Olympus SP310		X		Button Pusher
OLYMPUS	Olympus SP350		X		Button Pusher
OLYMPUS	Olympus SP510 UZ		X		Button Pusher
OLYMPUS	Olympus SP550 UZ		X		Button Pusher
OLYMPUS	Olympus SP560 UZ		X		Button Pusher
OLYMPUS	Olympus SP565 UZ		X		Button Pusher
OLYMPUS	Olympus SP570 UZ		X		Button Pusher
OLYMPUS	Olympus SP590 UZ		X		Button Pusher
OLYMPUS	Olympus SP620 UZ		X		Button Pusher
OLYMPUS	Olympus SP810 UZ		X		Button Pusher
OLYMPUS	Olympus SP820 UZ I HS		X		Button Pusher
OLYMPUS	Olympus Stylus 750		X		Button Pusher
OLYMPUS	Olympus Stylus XZ-2 i HS	X			Button Pusher
OLYMPUS	Olympus SZ-12	X			Button Pusher
OLYMPUS	Olympus SZ-31MR I HS	X			Button Pusher
OLYMPUS	Olympus TG 1		X		Button Pusher
OLYMPUS	Olympus TG 320	X			Button Pusher
OLYMPUS	Olympus TG 820 I HS	X			Button Pusher
OLYMPUS	Olympus VG 160	X			Button Pusher
OLYMPUS	Olympus VR 340	X			Button Pusher

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
PANASONIC	Panasonic Lumix DMC-FS200		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ10		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ15		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ18		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ20		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ28		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ30		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ35		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ50		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ60		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ7		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-FZ8		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-G1		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-G2		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-G3		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-G5		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GF1		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GF5		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GF5X		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GH1		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GH2		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GH3		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-GX1		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-L1		X		Button Pusher
PANASONIC	Panasonic Lumix DMC-L10			X	Manual
PANASONIC	Panasonic Lumix DMC-LX1	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-Lx2	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-LX3	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-LX5	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-LX7	X	X		Button Pusher
PANASONIC	Panasonic Lumix DMC-SZ1	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-SZ5	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-TS4	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-ZS15	X			Button Pusher
PANASONIC	Panasonic Lumix DMC-ZS20	X			Button Pusher
PENTAX	Pentax 645D			X	Canon E3
PENTAX	Pentax K-01		X		Button Pusher
PENTAX	Pentax K100			X	Canon E3
PENTAX	Pentax K100D			X	Canon E3
PENTAX	Pentax K10D			X	Canon E3
PENTAX	Pentax K110D			X	Canon E3
PENTAX	Pentax K2000D		X		Button Pusher
PENTAX	Pentax K200D			X	Canon E3
PENTAX	Pentax K20D			X	Canon E3
PENTAX	Pentax K5			X	Canon E3
PENTAX	Pentax K7			X	Canon E3

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
PENTAX	Pentax KR		X		Button Pusher
PENTAX	Pentax KX		X		Button Pusher
PENTAX	Pentax Optio SV	X			Button Pusher
PENTAX	Pentax Q		X		Button Pusher
PENTAX	Pentax Q10		X		Button Pusher
PENTAX	Pentax X-5		X		Button Pusher
POLAROID	Polaroid IF045	X			Button Pusher
POLAROID	Polaroid IS-3132		X		Button Pusher
POLAROID	Polaroid IS326	X			Button Pusher
POLAROID	Polaroid IS529	X			Button Pusher
POLAROID	Polaroid IS827	X			Button Pusher
RICOH	Ricoh Caplio GX-100		X		Button Pusher
RICOH	Ricoh Caplio GX-200		X		Button Pusher
RICOH	Ricoh GR Digital		X		Button Pusher
RICOH	Ricoh GR Digital II		X		Button Pusher
RICOH	Ricoh GR Digital III		X		Button Pusher
RICOH	Ricoh GR Digital IV	X			Button Pusher
RICOH	Ricoh GS700	X			Button Pusher
RICOH	Ricoh GXR		X		Button Pusher
RICOH	Ricoh PX	X			Button Pusher
SAMSUNG	Samsung DV300F	X			Button Pusher
SAMSUNG	Samsung EX2	X			Button Pusher
SAMSUNG	Samsung HZ25W		X		Button Pusher
SAMSUNG	Samsung MV900F	X			Button Pusher
SAMSUNG	Samsung NX20		X		Button Pusher
SAMSUNG	Samsung NX210		X		Button Pusher
SAMSUNG	Samsung ST76	X			Button Pusher
SAMSUNG	Samsung TL320		X		Button Pusher
SAMSUNG	Samsung TL350	X			Button Pusher
SAMSUNG	Samsung WB100		X		Button Pusher
SAMSUNG	Samsung WB150F	X			Button Pusher
SAMSUNG	Samsung WB500	X			Button Pusher
SAMSUNG	Samsung WB850F	X			Button Pusher
SIGMA	Sigma DP1	X			Button Pusher
SIGMA	Sigma DP2		X		Button Pusher
SONY	Sony Alpha A100		X		Button Pusher
SONY	Sony Alpha A200		X		Button Pusher
SONY	Sony Alpha A290		X		Button Pusher
SONY	Sony Alpha A330		X		Button Pusher
SONY	Sony Alpha A350		X		Button Pusher
SONY	Sony Alpha A380		X		Button Pusher
SONY	Sony Alpha A560			X	Sony RM-S1AM
SONY	Sony Alpha A580			X	Sony RM-S1AM
SONY	Sony Alpha A700			X	Sony RM-S1AM
SONY	Sony Alpha A850			X	Sony RM-S1AM
SONY	Sony Alpha A900			X	Sony RM-S1AM

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
SONY	Sony Alpha NEX3		X		Button Pusher
SONY	Sony Alpha NEX5		X		Button Pusher
SONY	Sony Alpha NEX7		X		Button Pusher
SONY	Sony Alpha A230		X		Button Pusher
SONY	Sony Alpha A300		X		Button Pusher
SONY	Sony Cyber Shot DCS-F707		X		Button Pusher
SONY	Sony Cyber Shot DCS-F717		X		Button Pusher
SONY	Sony Cyber Shot DCS-H1		X		Button Pusher
SONY	Sony Cyber Shot DCS-H10		X		Button Pusher
SONY	Sony Cyber Shot DCS-H2		X		Button Pusher
SONY	Sony Cyber Shot DCS-H20		X		Button Pusher
SONY	Sony Cyber Shot DCS-H3		X		Button Pusher
SONY	Sony Cyber Shot DCS-H50		X		Button Pusher
SONY	Sony Cyber Shot DCS-H7		X		Button Pusher
SONY	Sony Cyber Shot DCS-H9		X		Button Pusher
SONY	Sony Cyber Shot DCS-H90	X			Button Pusher
SONY	Sony Cyber Shot DCS-HX1		X		Button Pusher
SONY	Sony Cyber Shot DCS-HX10V	X			Button Pusher
SONY	Sony Cyber Shot DCS-HX20V	X			Button Pusher
SONY	Sony Cyber Shot DCS-HX30V	X			Button Pusher
SONY	Sony Cyber Shot DCS-RX1		X		Button Pusher
SONY	Sony Cyber Shot DCS-RX100	X			Button Pusher
SONY	Sony Cyber Shot DCS-S75		X		Button Pusher
SONY	Sony Cyber Shot DCS-S85		X		Button Pusher
SONY	Sony Cyber Shot DCS-TX20	X			Button Pusher
SONY	Sony Cyber Shot DCS-TX200V	X			Button Pusher
SONY	Sony Cyber Shot DCS-TX66	X			Button Pusher
SONY	Sony Cyber Shot DCS-V3		X		Button Pusher
SONY	Sony Cyber Shot DCS-W200	X			Button Pusher
SONY	Sony Cyber Shot DCS-W510	X			Button Pusher
SONY	Sony Cyber Shot DCS-W610	X			Button Pusher
SONY	Sony Cyber Shot DCS-W620	X			Button Pusher
SONY	Sony Cyber Shot DCS-W650	X			Button Pusher
SONY	Sony Cyber Shot DCS-W690	X			Button Pusher
SONY	Sony Cyber Shot DCS-WX150	X			Button Pusher
SONY	Sony NEX-5N		X		Button Pusher
SONY	Sony NEX-5R		X		Button Pusher
SONY	Sony NEX-6		X		Button Pusher
SONY	Sony NEX-7		X		Button Pusher
SONY	Sony NEX-F3		X		Button Pusher
SONY	Sony Scyber Shot DCS-HX200V		X		Button Pusher
SONY	Sony Shot DCS-WX50	X			Button Pusher
SONY	Sony SLT Alpha A35			X	Sony RM-S1AM
SONY	Sony SLT Alpha A55			X	Sony RM-S1AM
SONY	Sony SLT Alpha A57			X	Sony RM-S1AM
SONY	Sony SLT Alpha A65			X	Sony RM-S1AM

Brand	Camera	EPIC	EPIC 100	EPIC PRO	Cable Comments
SONY	Sony SLT Alpha A77			X	Sony RM-S1AM
VIVITAR	Vivitar ViviCam 46	X			Button Pusher
VIVITAR	Vivitar ViviCam 7122	X			Button Pusher
VIVITAR	Vivitar ViviCam 9112	X			Button Pusher
VIVITAR	Vivitar ViviCam F128	X			Button Pusher
VIVITAR	Vivitar ViviCam i7	X			Button Pusher
VIVITAR	Vivitar ViviCam iTwist F124	X			Button Pusher
VIVITAR	Vivitar ViviCam S127	X			Button Pusher
VIVITAR	Vivitar ViviCam S131	X			Button Pusher
VIVITAR	Vivitar ViviCam S137	X			Button Pusher
VIVITAR	Vivitar Vivicam S1527		X		Button Pusher
VIVITAR	Vivitar ViviCam S529	X			Button Pusher
VIVITAR	Vivitar ViviCam S536	X			Button Pusher
VIVITAR	Vivitar ViviCam S830	X			Button Pusher
VIVITAR	Vivitar ViviCam T027	X			Button Pusher
VIVITAR	Vivitar ViviCam T135 3D	X			Button Pusher
VIVITAR	Vivitar ViviCam T324N	X			Button Pusher
VIVITAR	Vivitar ViviCam V25	X			Button Pusher
VIVITAR	Vivitar ViviCam X020	X			Button Pusher
VIVITAR	Vivitar ViviCam X090	X			Button Pusher
VIVITAR	Vivitar ViviCam X137	X			Button Pusher
VIVITAR	Vivitar ViviCam X426	X			Button Pusher